

INTEL

INTEL

INTEL



Core Plus

PWM | ARGB CPU AIR COOLER



Socket : 1700 / LGA 1200 / 115X / 1700 / 775

Socket : FM1 / FM2 / AM5 / AM4 / AM3+ / AM3 / AM2+ / AM2

User's Manual

Manual del usuario

Bedienungsanleitung

Manuel d'utilisation

Manuale dell'utente

Podręcznik użytkownika

Руководство пользователя








Manual de utilizador

使用説明書/使用说明书

ユーザーズマニュアル

нұсқаулары

Talimatlar

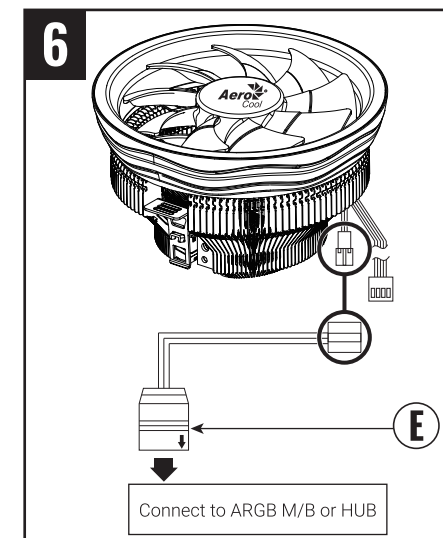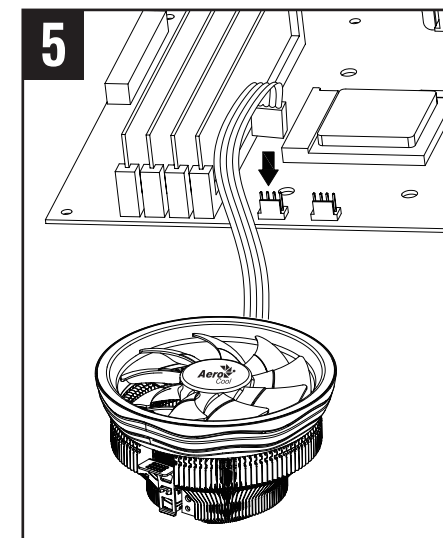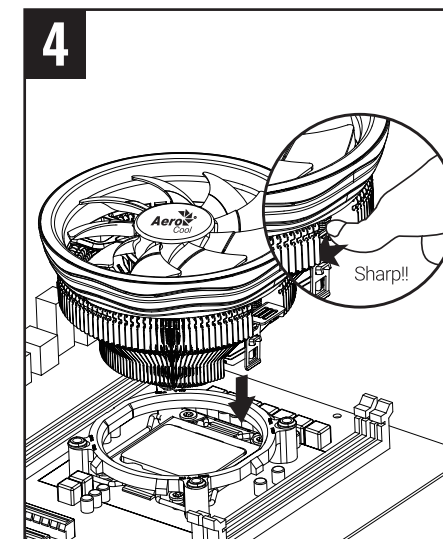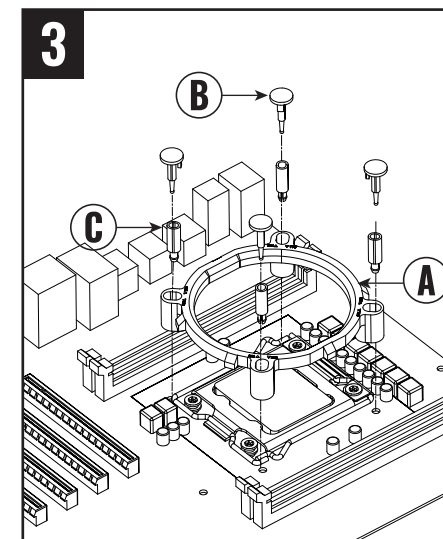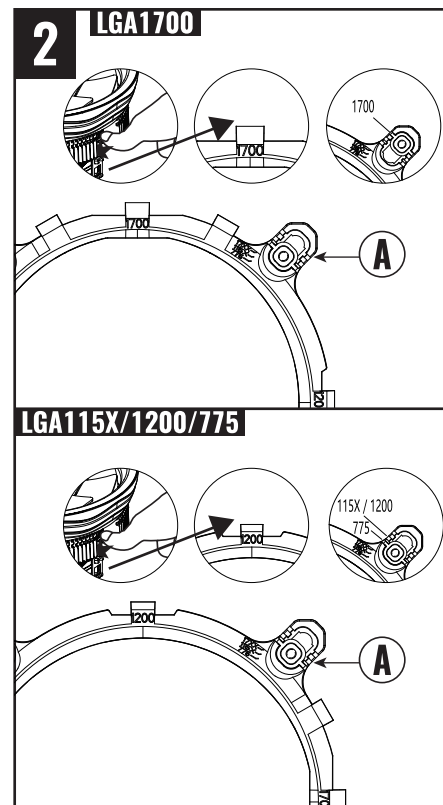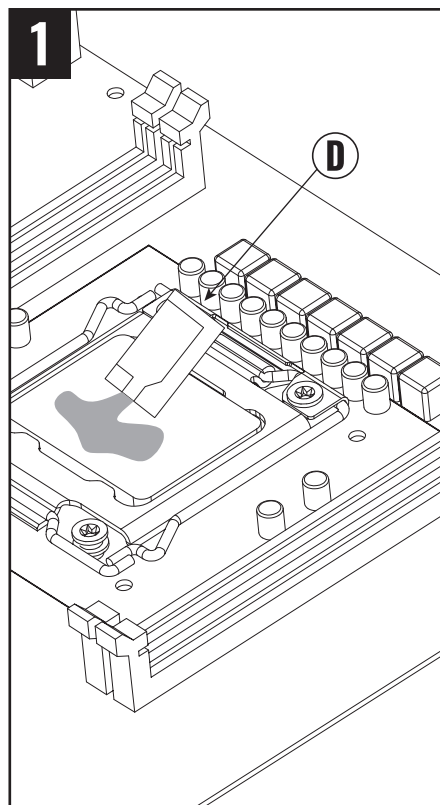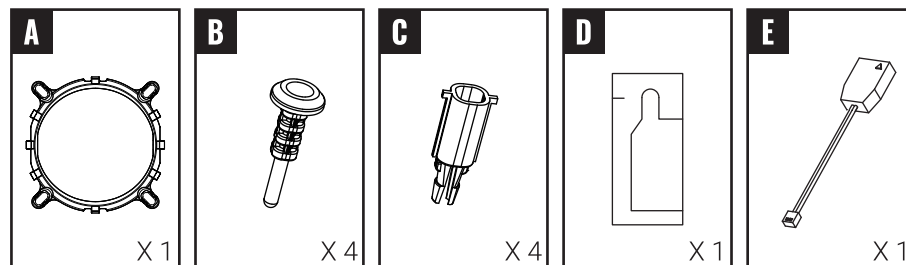

AMD

AMD

AMD



Core Plus



PWM | ARGB CPU AIR COOLER

Socket : 1700 / LGA 1200 / 115X / 1700 / 775

Socket : FM1 / FM2 / AM5 / AM4 / AM3+ / AM3 / AM2+ / AM2

User's Manual

Manual del usuario

Bedienungsanleitung

Manuel d'utilisation

Manuale dell'utente

Podręcznik użytkownika

Руководство пользователя






Manual de utilizador

使用説明書/使用说明书

ユーザーズマニュアル

нұсқаулары

Talimatlar

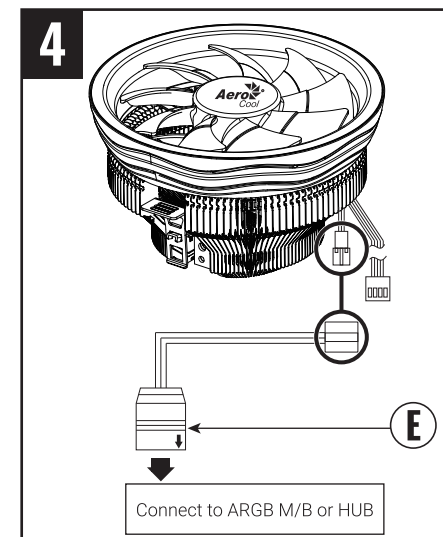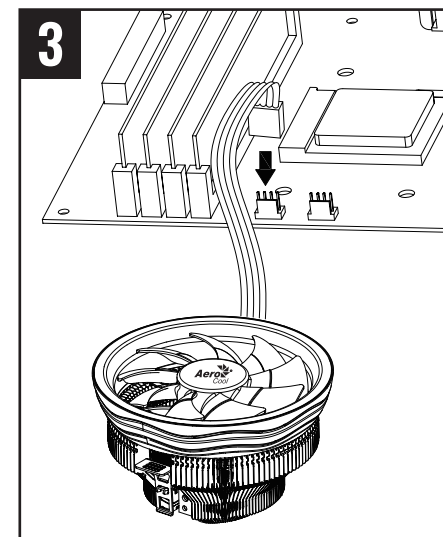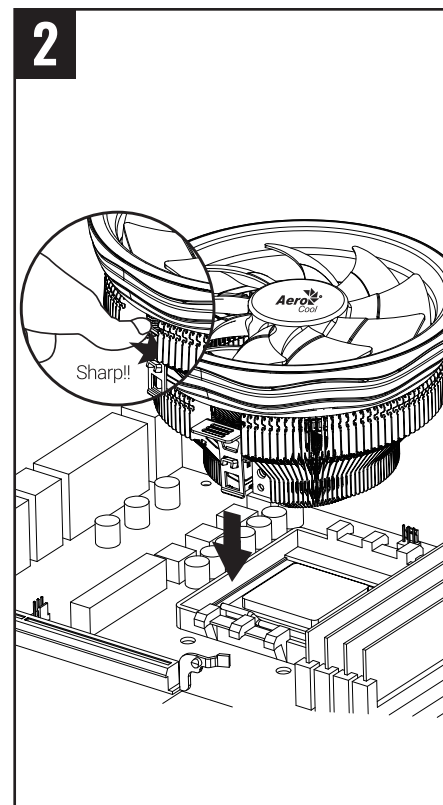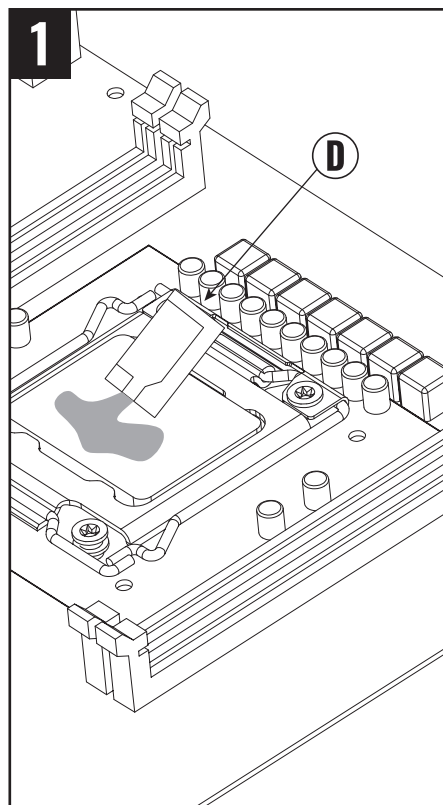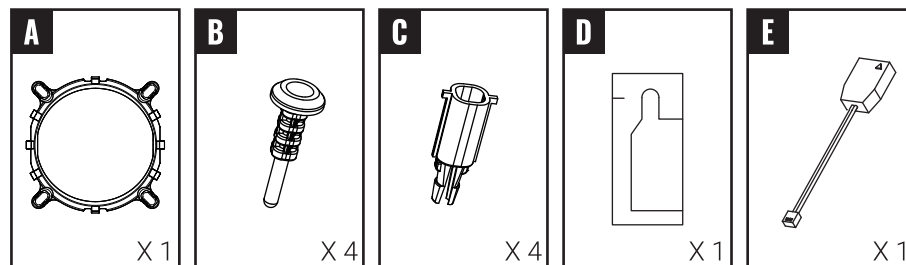

Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

aerocool.io