



- Controls 4 sets of fan speed individually
- 3 Speed setting Low/Mid/High
- 7 LED backlight colors selection or turn off backlight completely
- Support up to 20W per channel
- Can turn off speed completely
- Celsius/Fahrenheit switch for system temp. display
- USB3.0 port
- Card reader supports most common card SD/MMC/TF


#### 2. Product parameters

- \* Voltage Supply: +5V Range: 4.6~5.4V / +12V Range: 11.5V~12.5V
- \* Working Temperature: 0~50°C
- \* Storage Temperature: -10°C ~ 60°C
- \* Humidity: 10% ~ 90%
- \* Total wattage per channel cannot be greater than 25W. When exceeding 25W, power will be shut off due to auto protection.

Aerocool strongly recommends user to turn off the computer before changing fans.

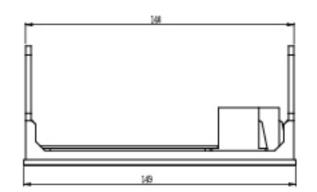

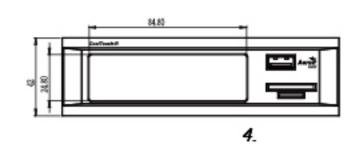

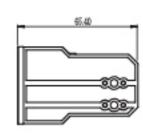

#### 3. Installation





1. Remove one bay cover from your computer.


Insert CoolTouch-R into the slot.




Fasten with screws or tool-free lock.

1. 2.

#### 4. Cable connections

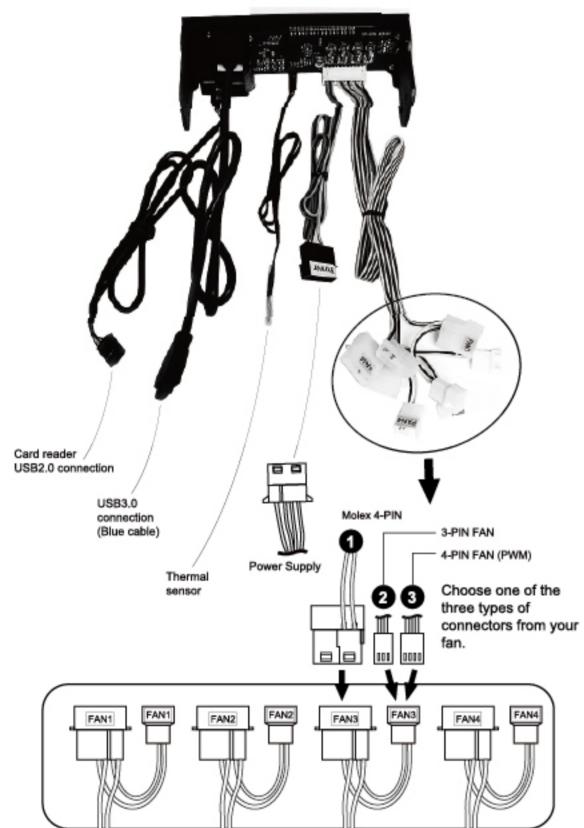


## 5. Functions

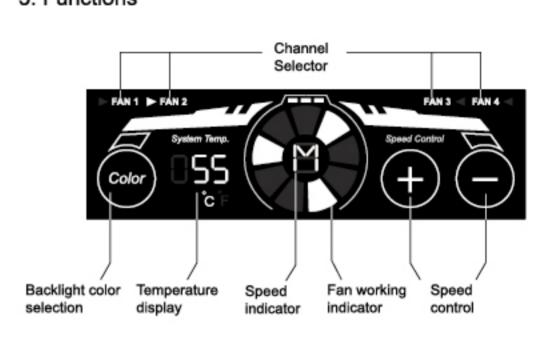

## 5-1. Set fan speed



2. Touch + or - sign to adjust the fan speed

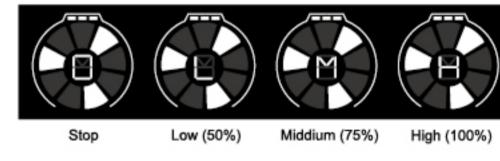


3.

# WARNING!

The user is operating at his/her own risk of damaging the electronic components by selecting fan speed to 0 RPM. The user must acknowledge the relationships between the controlled fan/s and the component/s it cools.

# 5-2. Change backlight color

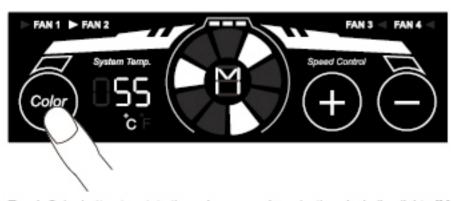

Touch Color button to rotate through seven color selections including light off function. Red > Green > Yellow > Blue > Purple > Light blue > White > OFF (Black screen)

# 5-3. Celsius/Fahrenheit



Touch the digits to switch between Celsius or Fahrenheit

# Important

Under these circumstances your fan may not respond to the fan controller:

 The fan has a built-in fan speed control 2. The fan itself has on/off switch

3. The fan is already controlled by aother fan controller